

# nüvü cameras


every photon counts

nüSpace  
EMCCD BUILT FOR  
SPACE

BREAKING BARRIERS IN  
LOW LIGHT  
SPACE-BASED IMAGING

ULTIMATE SENSITIVITY AT  
HIGH FRAME RATES

CUSTOMIZABLE CAMERA  
PLATFORM FOR CUBESATS

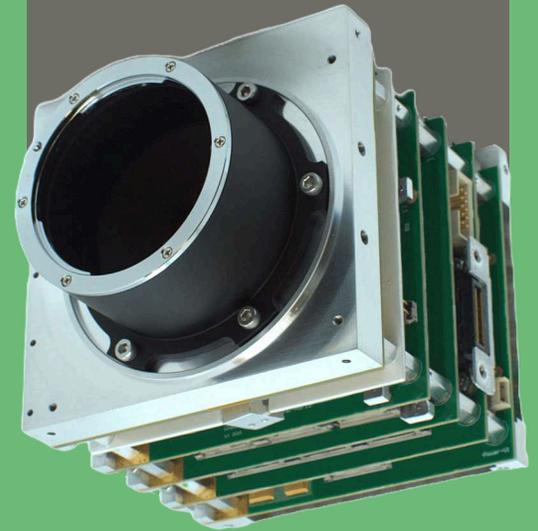

## nüSpace EMCCD

### CHARACTERISTICS

Size (H W D)<sup>1</sup>

Mass<sup>1</sup>

Power<sup>2</sup>

Thermal Vacuum Cycling (TVAC)  
tests

Random vibration testing

Radiation tolerance

Control & image interface

Imaging features

Scanning modes

Environmental operation  
temperature

### SPECIFICATIONS

96.0 x 96.0 x 95.5 mm  
Tailored to fit in 1U

<1.1 kg

<15 W

-45°C to 70°C and <10<sup>-4</sup>Torr  
NASA-STD-7000B

6.8 g RMS, 1 min/axis, 20-2000 Hz  
NASA-STD-7001B

>25 kRad for >5 years in LEO  
Contact us for GEO specifications

Camera Link

Binning  
Multiple ROI  
Photon Counting  
More available on request

High Dynamic Range (HDR) mode  
Time Delay Integration (TDI) mode

-35 °C to 60 °C

### OUTSTANDING PERFORMANCES THANKS TO NÜVÜ'S PROPRIETARY TECHNOLOGIES

The nüSpace platform is a state-of-the-art imaging solution built to bring Nüvü's signature electronics to nanosatellites, based on our design developed for NASA's flagship Roman Space Telescope.

With unmatched imaging sensitivity and flexibility with customizable detectors, integrated optics & interfaces, nüSpace camera platform supports your novel space mission goals.

### Potential space applications :

- Nighttime & daytime Earth observation
- Space surveillance (SSA)
- Sensitive UV imaging
- Extrasolar planet imaging
- Adaptive optics
- High resolution spectroscopy

# nüSpace EMCCD

With EMCCD sensors, the nüSpace enables single photon level imaging in space, combined with innovative readout modes like TDI and our exclusive HDR mode (patent pending).



Benefit from Nüvü's extensive expertise focused on sensor control electronics for sensitive imaging applications both space and ground-based.

The nüSpace is available with multiple EMCCD sensors, contact us for more specifications.

## nüSpace using Teledyne's CCD201-20 sensor

CHARACTERISTICS	SPECIFICATIONS
Operation frequencies <sup>3</sup>	10 MHz horizontal frequency 800 kHz vertical frequency
Imaging area	1024 x 1024 pixels 13 x 13 μm pixel area 13.3 mm x 13.3 mm effective area
Operating temperatures <sup>4</sup>	-135 °C to 60 °C
Frame rate	8.5 fps, faster with ROI
Readout noise <sup>5</sup>	<0.1 ē with EM gain
Linearity	>99%
Clock-induced charges <sup>5</sup>	0.0015 ē/pixel/frame
Dark current <sup>5</sup>	0.00007 ē/pixel/s @ -85°C
EM gain	1-5000
Spectral range	250-1100 nm
Data format	16 bits, FITS images available

## With optics (customizable)

CHARACTERISTICS	SPECIFICATIONS
Swath @ 500 km	7.4 km
GSD @ 500 km	7.2 m
Focal length	900 mm
Aperture	80.5 mm



Figure 1  
Left: Nighttime nüSpace EMCCD ground image in starlight conditions taken with f/11 optics using 1 fps standard snapshot imaging with EM gain;  
Right: Comparative satellite daytime ground image.

## QUANTUM EFFICIENCY

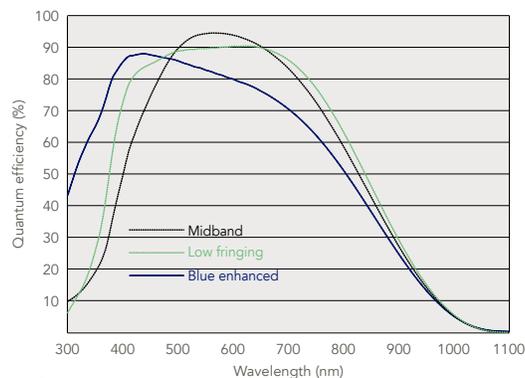


Figure 3  
Typical spectral response as a function of wavelength, as specified by the EMCCD detector manufacturer<sup>6</sup>


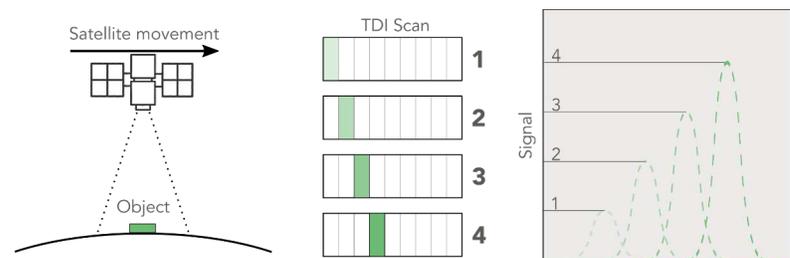


Figure 2  
TDI readout scheme. TDI allows the capture of low-light-level images at very high satellite speeds. This mode overcomes limitations in illumination by shifting the image across the sensor during integration to track a moving target, thus achieving longer exposures & higher signal without blurring.

## TECHNICAL DRAWINGS<sup>1</sup>

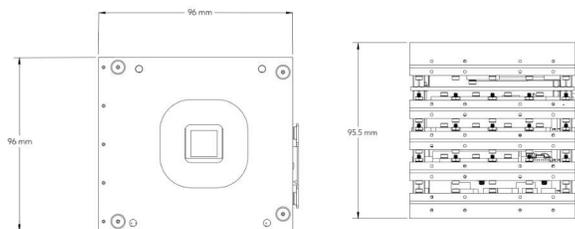

- 1 With standard front & back plates. Mechanical interface plates can be removed and/or modified.
- 2 Mean power. Measured at 1 FPS.
- 3 More clock speeds available upon request.
- 4 As per the EMCCD detector manufacturer's data sheet. Other configurations may exist.
- 5 Typical values measured at horizontal frequency 10 MHz, vertical frequency 800 kHz and EM Gain 1000. These numbers may vary depending on the individual EMCCD detector.
- 6 Nüvü gives only the specifications of the EMCCD detector's manufacturer for grade 1 sensors (e.g. Quantum efficiency, aesthetic specifications, blemishes).

Contact us at:  
[sales@nuvucameras.com](mailto:sales@nuvucameras.com)  
 +1 514 733 8666  
 Montreal (Quebec)  
 CANADA  
 nüSpace and NüPixel are the intellectual properties of Nüvü Caméras. All other brands are properties of their respective owners. Incremental changes are made to the products and specifications are subject to modification without prior notice.  
 nüSpace Specification Sheet 3.1.3  
 © Nüvü Caméras, 2026

